



Peel back NMB Menu Panel Installation

Remove the old menu panels from menu board.

Clean menu board backer to remove any dust or debris.

Peel back approximately 4-6" of the paper backer of the peel and stick graphic and crease the back of the backer paper, leaving the low-tac corner exposed

Align the image to the top of the menu board and apply exposed adhesive area to menu backer. If it is not square to the top it can be removed and repositioned several times. Once you are aligned square to the top of the frame continue to slowly pull the paper backer downward in 4-6" increments, smoothing the image as you go. Depending on the size, it may be helpful if to have two people helping, one person pulls down the backer, while the other smooth's the image on the surface. Use your hands to smooth the image in place. If there are any bubbles or wrinkles just peel back that area and re-apply.

Caution

Clean only with dry cloth. Do Not Clean Prints with water or liquid chemicals for the first 15 days while the ink cures into the material.

Store Made Radius Display Case Installation:

94" SMR Wood Trim Header:

1. Place Velcro Dots beginning in the center of the cabinet and the header than equally space them on both sides;
2. Begin mounting the header to the cabinet in the center and mount to the edges.
3. Using a box knife, trim off excess header from each side of the case.

Shelf Talker:

1. Arrange text and blanks before mounting to the case. The plastic piece will be facing down and words and blanks should be alternating in the display.
2. Slide the glass shelf into the opening of the extrusion
3. Ensure that the extrusion is centered in the shelf.

SMR Clings:

1. Remove items from bottom shelf of the case
2. Clean display case to remove any dust or debris.
3. Place the cling on the inside of the case glass between the glass and the wooden frame holding the glass in place.
4. If the cling is too large to fit in the case trim, with scissors, equally from each side of the cling to fit the size, you need

Package Gift Display Header Installation: (Regular)

1. Clean display case header to remove any dust or debris.
2. Verify that the header will fit in the space above the PGD Case and trim down, with scissors and a straight edge, equally on both sides of the header
3. Remove tape cover from the rear of the cling to reveal adhesive strips Will the adhesive be pre-adhered? It hasn't in the past
4. Beginning in the center install the header on the top then bottom adhesive strips.
5. Once installed go back and press in the adhesive tape into the wood panel making sure that it gets good contact with the case.

Package Gift Display Header Installation: (Rigid - Intended for PGD Cases with no header space)

1. Clean display case header to remove any dust or debris.
2. Remove tape cover from the rear of the rigid board on the bottom
3. Beginning in the center install the header adhesive strips to the top of your cabinet top molding.
4. Once installed go back and press in the adhesive tape into the wood panel making sure that it gets good contact with the case.

Large Graphic install

1. Clean menu board backer to remove any dust or debris.
2. Verify that the Graphic will fit in the space on the frame (or wall in the case of the Main Graphic Unit).
3. Trim any excess equally from both ends with scissors and a straight edge.
4. Remove tape cover from the rear of the cling to reveal adhesive strips.
5. Beginning in the center install the header on the top then bottom adhesive strips.
6. Once installed go back and press in the adhesive tape into the panel making sure that it gets good contact with the frame.

Frame Installation Instructions

1




Attach one Cleat to the back of the art.

Cleat should be mounted with screw holes at the top using the #8 x 1/2" screws.

You may want to drill pilot holes in a wood frame.

2

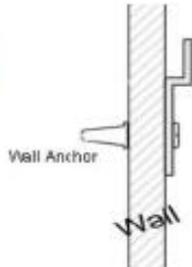


Attach one Cleat to the wall.

Wall cleat should be installed with screw holes at the bottom using the #8 x 1" screws and plastic wall anchors.

Make sure to install the cleat level—small adjustments to level the cleat can be made by moving slightly in the slotted screw holes before tightening cleat to the wall.

3

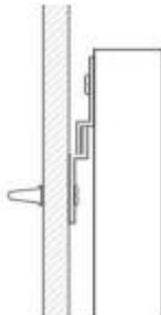

Hold art flush against the wall slightly above the wall cleat and slide the art down to interlock the two cleats.

You can slide the art left or right for to center on your wall, however, the art cleat and the wall cleat need to be engaged at least 90% of their length for strength and stability.

Art can easily be removed from wall by lifting the frame upward a few inches to disengage the cleat.

1. Measure and mark for the position of the wall cleat on the wall. The wall cleat should be oriented so that the screw holes are on the bottom and the top edge is open and out from the wall. This cleat must be installed as level as possible.
2. Attach the cleat to the wall at your marks using the #8 x 1" screws and plastic wall anchors provided. Small adjustments to level can be made by making use of the slotted screw holes.
3. Place the wood frame or panel face down on a blanket or soft surface and attach the second cleat provided to the back of the frame's top rail, slightly down from the top edge and centered on the rail, using the #8 x 1/2" screws provided. The cleat should be mounted so that the screw holes are on the top and the bottom edge is open and out from the frame rail. This cleat must be installed as level as possible (positioned down evenly from the top edge of the frame) .
4. To hang the frame, place it flush against the wall so that the bottom edge of the frame cleat is positioned slightly above the top edge of the wall cleat and the frame is centered on the wall cleat. Let the frame slide down the wall slowly and evenly until the cleats connect together completely some side-to-side adjustment can be made by lifting the frame slightly and shifting it to the left or right. When adjusting a wood frame in this way make sure that the frame cleat and the wall cleat are engaged along at least 90% of their length.
5. To remove the frame from the wall completely, lift the frame directly upward a couple of inches to disengage the cleats.
6. T Head Picture locking screw video can be viewed at: <https://youtu.be/lHq1EfSXaEs>